








 









FME-CONNECTORS



ORDERING CODE NO.		DESCRIPTION
FME-RG 58		Basic FME-connector for crimping on RG 58
FME-RG 174		Basic FME-connector for crimping on RG 174
MFME-RG 58		Male FME-connector for crimping on RG 58
MFME-RG 174		Male FME-connector for crimping on RG 174
FME-P		Extension (male to male) connector for interconnection of FME-cables
FME-FME		FME extension connector, female to female
FME-BNC		FME → BNC (male) connector
FME-TNC		FME → TNC (male) connector
FME-N		FME → N (male) connector
FME-UHF		FME → UHF (male) connector
FME-MUHF		FME → Mini-UHF (male) connector
FME-SMA		FME → SMA (male) connector
FME-FSMA		FME → SMA (female) connector
BFME-ICOM		Black FME → ICOM connector for interconnection of FME-cables
FME-EBNC		FME → elbow-BNC (male) connector
FME-ETNC		FME → elbow-TNC (male) connector
FME-EMUHF		FME → elbow-MUHF (male) connector