











# BFME-CONNECTORS



ORDERING CODE NO.		DESCRIPTION
BFME-BNC		Black FME → BNC (male) connector
BFME-TNC		Black FME → TNC (male) connector
BFME-N		Black FME → N (male) connector
BFME-UHF		Black FME → UHF (male) connector
BFME-MUHF		Black FME → Mini-UHF (male) connector
BFME-MQ		Black FME → MiniQuick (male) connector
BFME-ICOM		Black FME → ICOM connector
BFME-EBNC		Black FME → elbow-BNC (male) connector
BFME-ETNC		Black FME → elbow-TNC (male) connector
BFME-EMUHF		Black FME → elbow-mini-UHF (male) connector