

# MH 3-SM


5/8  $\lambda$  Mobile Antenna with Shock Spring for the 160 MHz Band

## DESCRIPTION

- Sturdy, 3 dB gain, 5/8  $\lambda$  antenna in professional quality.
- Available with glassfiber or stainless steel whip.
- Elegantly designed SM-mount especially suited for mounting on the curved wings.
- Supplied with three different packing gaskets for optimum adjustment to the wing contour.
- M6-thread whip-fastening system.
- Mount provided with FME-connection (supplied without cable).



## PACKING GASKETS

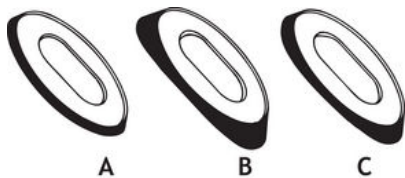

## ORDERING DESIGNATIONS

TYPE NO.	WHIP
MH 3-SM	Glassfiber
MH 3-SMR	Stainless steel

## SPECIFICATIONS

ELECTRICAL	
MODEL	MH 3-SM
ANTENNA TYPE	5/8 $\lambda$ mobile whip antenna
FREQUENCY	Tunable by cutting within: 144...175 MHz
IMPEDANCE	Nom. 50 $\Omega$
POLARISATION	Vertical
GAIN	3 dB (compared to 1/4 $\lambda$ antenna)
BAND WIDTH	$\geq 6$ MHz @ SWR $\leq 2.0$
SWR	$\leq 1.3$ @ f. res.
MAX. POWER	150 W
MECHANICAL	
MATERIALS	<b>Whip:</b> Conical glassfiber or black-chromed stainless steel. Black chromed brass. <b>Spring:</b> Black-chromed stainless steel <b>Mount:</b> Brass Environment-proof plastics
RECOMMENDED INSTALLATION TORQUE	6.5 $\pm$ 0.5 Nm
CABLE	FME-cable to be ordered separately
COLOUR	Black
HEIGHT	Approx. 1.4 m (dep. on freq.)
WEIGHT	Approx. 350 g
MOUNTING	Wing mounting using one of the three packing gaskets supplied with the mount


## INSTALLATION

The SM-mount is especially designed for mounting on curved surfaces, e.g. the curved wings. The mount is supplied with three different packing gaskets to ensure the best possible adjustment to the wing contour at the desired location of the installation.


Please refer to the installation steps described below.

When cleaning the car in car-washing machines, the whip should be removed – a 9 mm fork spanner can be used. After wash, the whip is refitted and tightened lightly with the spanner.


### INSTALLATION STEPS:

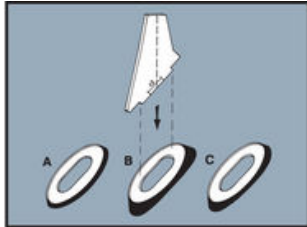


**1. Installation tools.**  
To find a possible location for the installation of the SM-mount, the accompanying cardboard model of the mount may be used together with the three packing gaskets (types A, B and C). Which one of the packing gaskets to use depends on the angle and the curving of the wing.

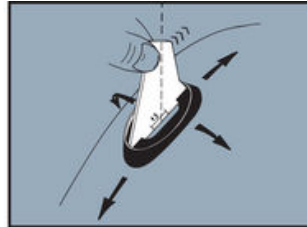


**2. Determine a suitable location for the installation.**  
Use the cardboard model of the mount together with a packing gasket to check the fitting to the wing contour at the desired installation spot. Make sure that the desired positioning angle as indicated by the dotted line on the cardboard model can be obtained for the whip. If not, try another packing gasket or try moving the model to find an acceptable location for the installation. (The packing gasket should be oriented with the letter indicating the gasket type (A, B or C) at the bottom end). Check that there are no obstacles on the inside to prevent installation.

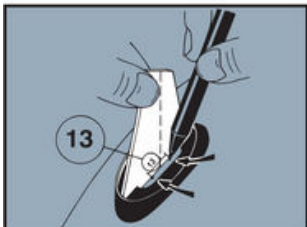

**3. Mark the position for the SM-mount.**  
With the cardboard model in the correct position place two marks as indicated on the figure. The distance between the marks is 13 mm and the marks are to be placed as close to the cardboard model as possible. Remove the cardboard model and the packing gasket.

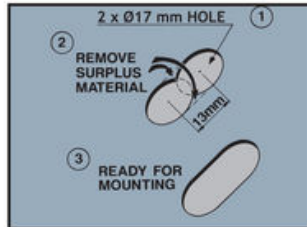

**4. Make the hole for the installation.**  
The hole for the installation is made by drilling two 17 mm dia. holes with the marks as centres. The remaining metal between the holes is removed by cutting/ripping.

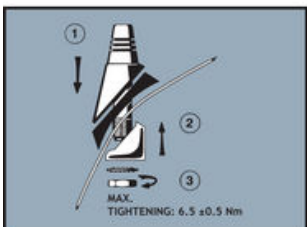



**5. Install the SM-mount.**  
Install the SM-mount as shown in the figure. Fine-adjust the positioning of the whip before tightening the mount - recommended installation torque: 6.5 ± 0.5 Nm.



**6. Fit the whip.**  
Fit the whip and tighten it tightly with a 9 mm fork spanner.

## TUNING:

The antenna should always be tuned using an SWR-meter. The cutting diagrams below serve as a guide for this procedure.

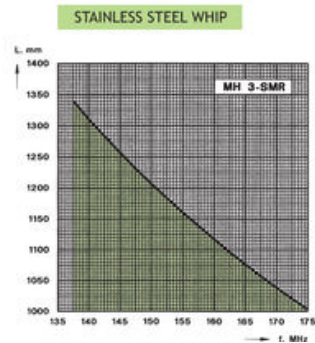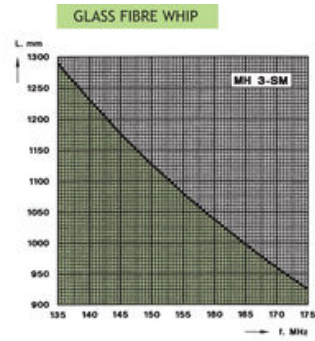

PROCOM A/S reserve the right to amend specifications without prior notice.

16/01/2009